

52 Seats

| | | | |
|-----------|---|-----|----|
| 52 10 000 | Front seat – remove and install | 52- | 1 |
| 100 | Rail (outer or inner) on front seat – remove and install or replace | 52- | 1 |
| 210 | Reclining mechanism on left or right front seat – remove and install or replace | 52- | 2 |
| 450 | Backrest wall for left or right front seat – remove and install | 52- | 2a |
| 52 20 000 | Rear seat cushion and backrest – remove and install | 52- | 3 |
| 254 | Lock for rear seat backrest, left or right – replace | 52- | 3 |

52-1



52 10 000 REMOVING AND INSTALLING FRONT SEAT

Push back part.
Pull off caps.
Unscrew nuts (1).

30 52 023



Push seat forward.
Pull off caps.
Unscrew nut and bolt.

30 52 024



4 Deers:
Pull off cap.
Unscrew seat bolt.
Installation:
Tightening torque*.

30 52 016

* See Specifications



52 10 100 REMOVING AND INSTALLING OR REPLACING SEAT RAIL (OUTER OR INNER) ON LEFT OR RIGHT FRONT SEAT

Remove front seat – see 52 10 000.
Unscrew bolt.
Compress springs and pull out pin.
Installation:
Tightening torque*.
Always replace pin.


30 52 025



52 1100

Secunia Pin Shown Removed:
Guide in tongue of Special Tool 52 1100
– arrow (1) is deactivated – add drive out pin.
Installation:
Always replace pin.
Drive in pin against stop with the special tool – manual.
Check whether arrow (1) has engaged and stops (2) are not damaged.

30 52 024

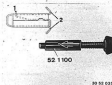

52 1100

30 52 025



Disconnect linkage rod.
Lift connecting tube out of square hole in control lever with a screwdriver.

30 52 013

* See Specifications

52-2

52 10 210 REMOVING AND INSTALLING OR REPLACING RECLINING MECHANISM ON LEFT OR RIGHT FRONT SEAT

Remove front seat – see 52 10 000.
Remove seat rails – see 52 10 100.
Unscrew covers.

Unscrew screws and take off backrest
trim panel.

Disconnect left and right cables (1) for
backrest lock.
Press cable guides (2) out of holders.

Disconnect seat cover partially.
Unscrew left and right bolts.
Take off backrest.



Lift out lever (1) with a screwdriver.

Precaution:
Tab of lever (1) engages in lever (2).

Remove circlip (1).
Unlock backrest with lever (2) and
remove the reclining mechanism.

Pull off retainer (1).

Installation:
Connect gas pressure spring (2) with
Special Tool 00 5 600 and secure with
new retainers.

52-2a


52 10 450 REMOVING AND INSTALLING
PANEL ON BACK OF LEFT OR
RIGHT FRONT SEAT BACK-
REST

Unscrew screws and pull panel down.



52 10 450 F

BMW Sport Seats:
Unscrew screws.
Pull off handles.

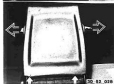

52 10 028

Lift out mucks from underneath.



52 10 029

Inside Handle on Passenger's Side:
Unscrew screw and lift out holder upwards.
Push up panel and take it off over outside
handle.



52 10 030



30 52 030



30 52 034



30 52 037



30 52 038

32 20 800 REMOVING AND INSTALLING REAR SEAT CUSHION AND BACKREST

Lift out seat cushion.

Unscrew bolts (1), or (1a) for convertibles, and pull up backrest out of holders (2).

BMW Touring.

Split Rear Seat Cushion and Backrest:
Lift rear end of seat cushion on strap and tilt the cushion forward.

Push in both retainers and lift out both seat cushions separately.

Note:
Replacing Seat Cushion Covers:
Mount zipper with Special Tool 00 5 020.

Align the marks on the zipper to be opposite each other prior to installations.

Removing Backrest:
Tilt the side backrest section forward for this purpose.
Unscrew bolt (1).
Lift out side backrest section.



30 52 032



30 52 040



30 52 043



30 52 041

Tilt backrest forward.
Push in retainers with a screwdriver.
Lift out backrest from the side.

32 20 254 REPLACING LOCK FOR LEFT OR RIGHT REAR SEAT BACKREST

Slide off cover toward the rear.

Installation:
Install the backrest first and then the cover.

Pry off the backrest plate.

Unscrew lock bolts.
Disconnect linkage.
Remove backrest lock.